


| | | |
|--|-----------|-------------------------|
| Last Modified: 2-12-2007 | | 1.6 A |
| Service Category: Engine/Hybrid System | | Section: Intake/Exhaust |
| Model Year: 2008 | Model: xB | Doc ID: RM000001XBN00LX |
| Title: 2AZ-FE EXHAUST: EXHAUST PIPE: REMOVAL (2008 xB) | | |

REMOVAL

1. REMOVE NO. 1 ENGINE UNDER COVER [INFO](#)

2. REMOVE HEATED OXYGEN SENSOR [INFO](#)


3. REMOVE TAIL EXHAUST PIPE ASSEMBLY

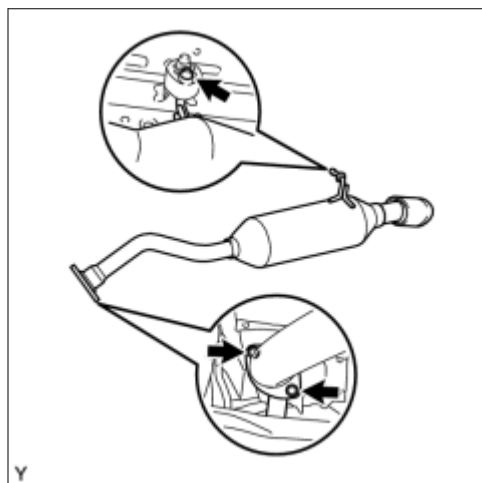

(a) Remove the 2 bolts and No. 4 exhaust pipe support and remove the tail exhaust pipe assembly.


(b) Remove the exhaust pipe gasket.

4. REMOVE TAIL PIPE BAFFLE

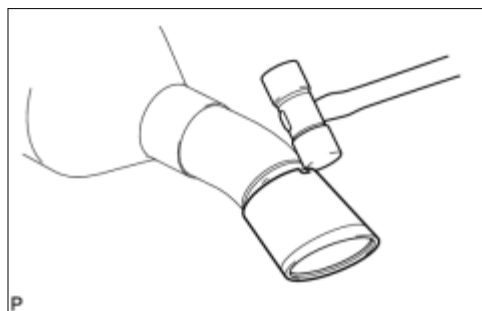


(a) Using a plastic hammer, uniformly tap out and remove the exhaust tail pipe baffle.

5. REMOVE NO. 2 CENTER EXHAUST PIPE ASSEMBLY

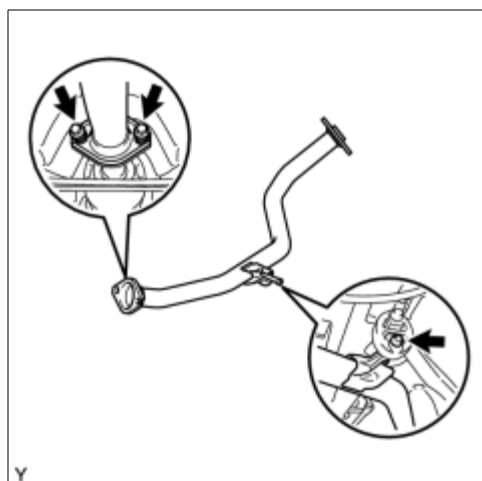


- (a) Remove the 2 bolts and 2 compression springs.
- (b) Remove the No. 4 exhaust pipe support and remove the No. 2 center exhaust pipe assembly.
- (c) Remove the exhaust pipe gasket.

6. REMOVE FRONT FLOOR CENTER BRACE

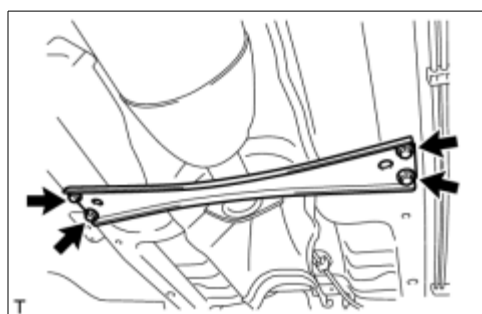


- (a) Remove the 4 bolts and remove the front floor center brace.

7. REMOVE CENTER EXHAUST PIPE ASSEMBLY

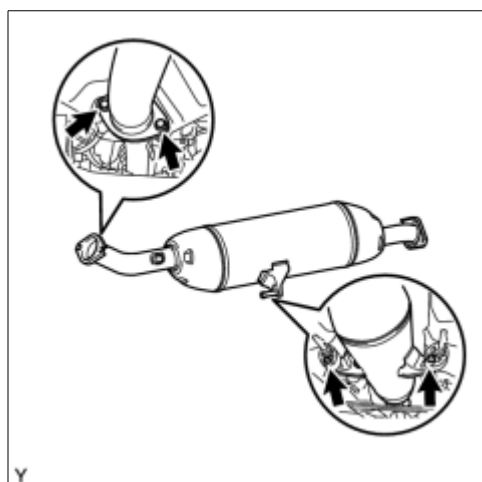

- (a) Remove the 2 bolts and 2 No. 4 exhaust pipe supports and remove the center exhaust pipe assembly.
- (b) Remove the exhaust pipe gasket.

8. REMOVE FRONT EXHAUST PIPE ASSEMBLY

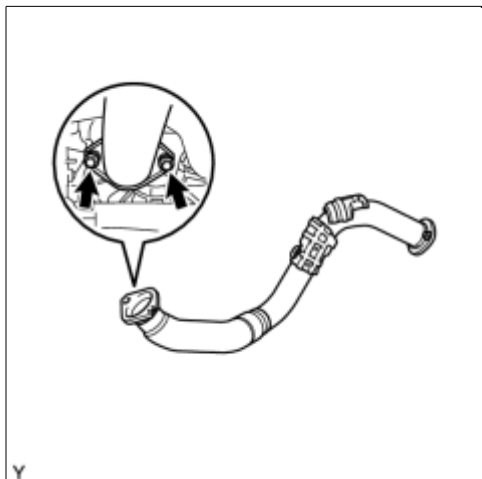

(a) Remove the 2 bolts and 2 compression springs and remove the front exhaust pipe assembly.

